




Vehicle Harness Comparison Chart

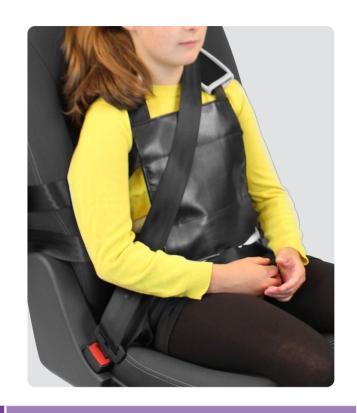


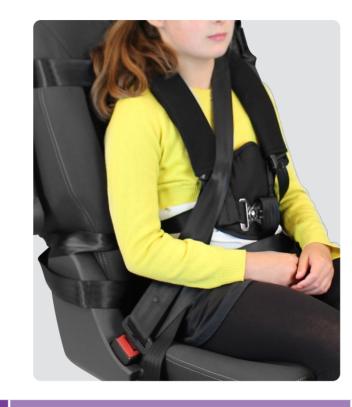





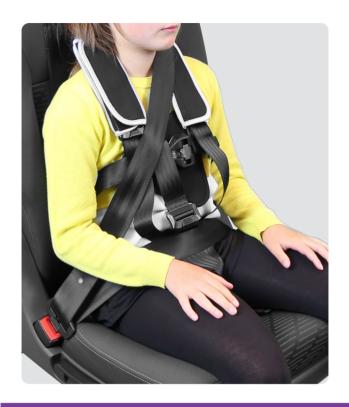

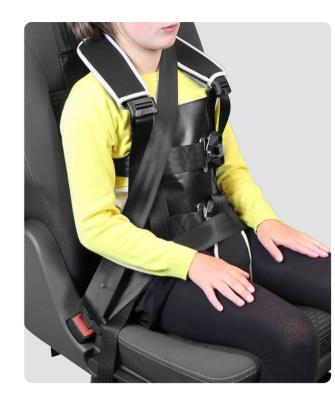

| SPECIFICATIONS | HOUDINI 13 | | HOUDINI 22 | | HOUDINI 27 | | HOUDINI 28 HOUDINI 3 | | INI 31 |
|---|---|---------|--|-------------------------------|--|---------|--|---|---------|
| | 13J | 13H | 22C | 22D | 27A | 27В | 28 | 31A | 31B |
| DESCRIPTION | All buckles are behind the seat so user cannot release them. | | Popular option for taxis. Body section attaches to user before entering the vehicle. Multiple seat straps can be purchased. | | Full 5 point harness for more postural control. For single back support seat only. | | Same as Model 27, however this popular version is designed for bench vehicle seats. | Most secure harness. 7 point control with bib front to secure the torso effectively. | |
| APPROX AGE OF USER* | 3-8yrs | 7-Adult | 3-8yrs | 7-Adult | 3-8yrs | 7-Adult | 7-Adult | 3-8yrs | 7-Adult |
| GAP REQUIRED BETWEEN SEAT & BACK SUPPORT? | ✓ | ✓ | ✓ | ✓ | × | × | ✓ | ✓ | ✓ |
| CAN BE FITTED TO USER BEFORE ENTERING THE VEHICLE | × | × | • | e harness. tays in vehicle | × | × | × | × | × |
| SINGLE SEAT COMPATIBLE | (Not suitable with built in headrest) | | ✓ | | ✓ | | ✓ | ✓ | |
| BENCH SEAT COMPATIBLE | × | | ✓ | | × | | ✓ | ✓ | |
| COMMENTS | To fit the harness easy access is required all the way round the seat back and underneath the base of the seat cushion. | | The body harness is worn before entering the vehicle. It is fitted with a waist belt and chest strap which fasten behind the passenger's back with side-release buckles. | | Can offer postural support and assist in seating the occupant in an upright sitting position for those with physical disabilities where extra support and positioning is required during travel. | | Very popular harness. This Houdini 28 harness is similar to the Houdini 27 except that the seat attachment straps go vertically around the vehicle seat. | Offers greater support due to a front PVC pad that is attached around the individual's torso with two straps at. fitted with anti-escape buckles. | |
| BUCKLE TYPE** | Std/AE/PP | | AE/PP/MAG. | | AE/Std/PP | | AE/Std/PP | AE/PP/MAG. | |
| RESTRAINT LEVEL | Mild | | Moderate/High | | Moderate | | Moderate | High | |
| FIXING TYPE | Buckles connect around rear of seat. | | Vertical fixing straps installs to vehicle seat first. | | 2 horizontal straps connect to vehicle seat. | | 2 vertical straps connect to vehicle seat. | 2 vertical straps connect to vehicle seat. | |

^{*} Indicator only, for accurate product selection client measurements are the best guide.

^{**} AE = Anti-escape PP= Pen/Key Release Std..= Push Button Mag.= Magnetic Upgrade

 $^{^{\}star\star\star}$ Booster seat base unit only. Harness cannot be incorporated with full back support/seat booster.